


SP SINK OVERFLOW INTSALLATION INSTRUCTIONS

W38554-150 SHORT GRID FOR THIN WALL SINKS W38557-150 LONG GRID FOR EPOXY THICK WALL SINKS

- 1** Attach overflow adapter to sink waste as shown. Hand tighten only do not use mechanical tightening devices or Teflon tape. Any traps should be attached to bottom of adaptor as shown below.
- 2** Determine location of overflow grid in the sidewall of the sink. Make sure to choose the location so there is enough overflow tube to reach from the grid to the adapter without kinking the hose. Hose shouldn't bend below the level of the adapter inlet- trim to fit if necessary .
- 3** Cut a 1.25 inch diameter hole in the side wall of sink. Install grid into hole, place washer onto grid between sink wall and elbow. Screw grid into elbow- hand tighten only.

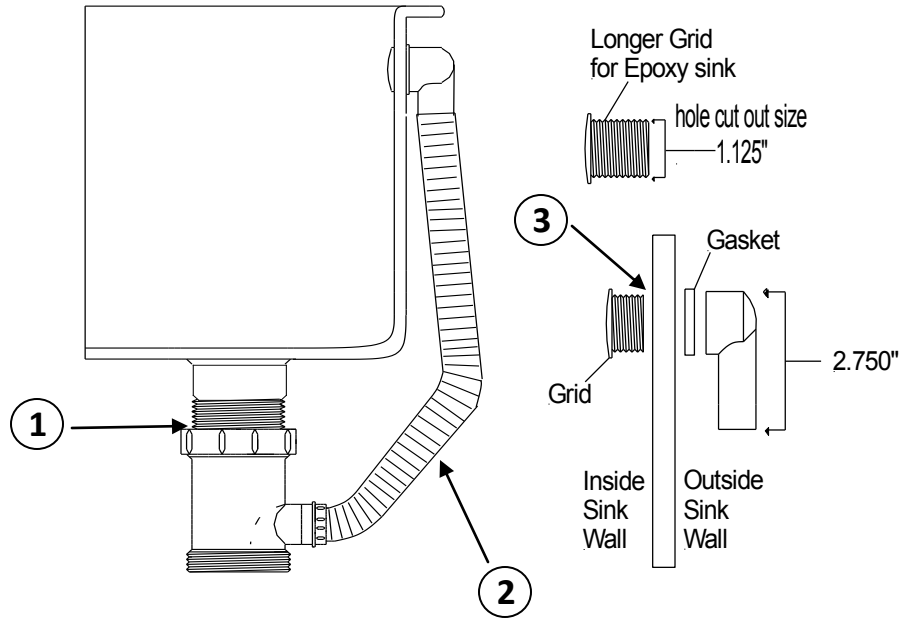

OVERFLOW SHOWN WITH OPTIONAL TRAPS

